

Optimize the corner space

HIGOLD®



## Canto Mágico de Fechamento Suave

**101055 – Left Opening**

**101056 – Right Opening**

HIGOLD®

# SHEARER MAGIC CORNER

TAKE ADVANTAGE OF CORNER SPACE

Full storage | Two level adjustment | Separate linkage design



## CAREFULLY SELECTED MATERIALS TO RIDE THE TIDE WITHOUT FEAR

Preferred materials and special surface treatments  
Let the basket easily adapt  
to the humid environment of the kitchen

HIGOLD®

**CARBON STEEL**

Nano coating

**SPACE ALUMINUM**

Nano coating



HIGOLD®



## 3D ADJUSTMENT TECHNOLOGY SEAMLESS FIT OF DOOR CABINETS

By twisting the screw Adjust level, depth and height  
Seamlessly fit the door panel to the frame

**HIGOLD®**

## DETAILS HIGHLIGHT QUALITY HIGOLD®

01

### HIDDEN HOOK

No tools required  
Adjustable installation  
height



02

### ANTI-SLIP TEXTURE

Stable bottom  
Items are not slippery

## DETAILS HIGHLIGHT QUALITY HIGOLD®

03

### DAMPING SLIDE

Open and close freely  
Silent and smooth




PRODUCT PARAMETERS




| ART.NO | Cabinet(T) | w x d x h     | Material                         | Surface      | Color        | Description   |
|--------|------------|---------------|----------------------------------|--------------|--------------|---------------|
| 101055 | ≥900mm     | 860x490x535mm | Carbon steel +<br>space aluminum | Nano coating | Premium gray | Left opening  |
| 101055 | ≥900mm     | 860x490x535mm | Carbon steel +<br>space aluminum | Nano coating | Premium gray | Right opening |

AVAILABLE IN LEFT OR RIGHT MODELS  
INSTALLATION IS NOT RESTRICTED


HIGOLD®

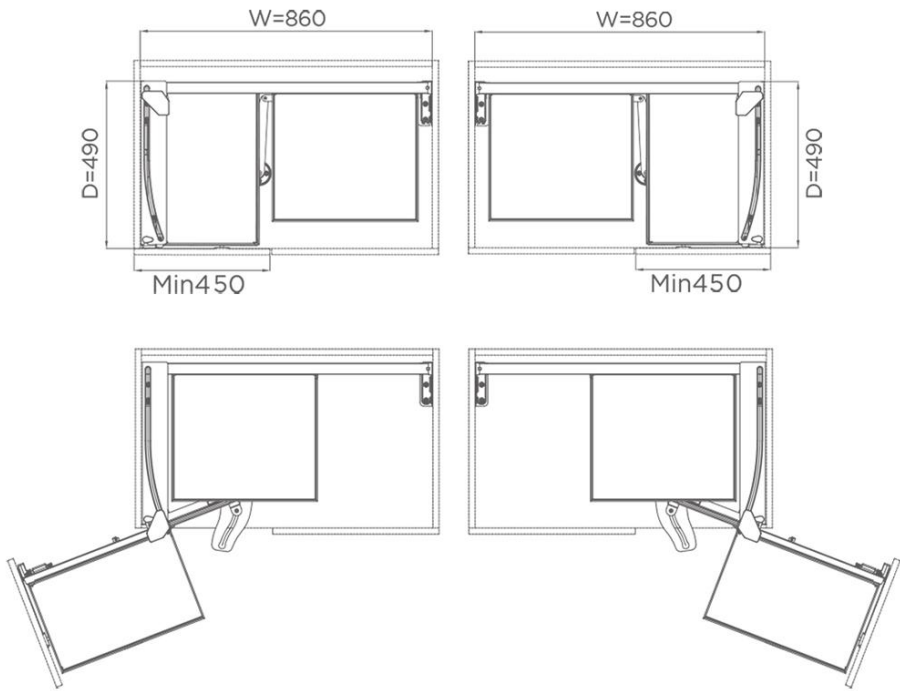

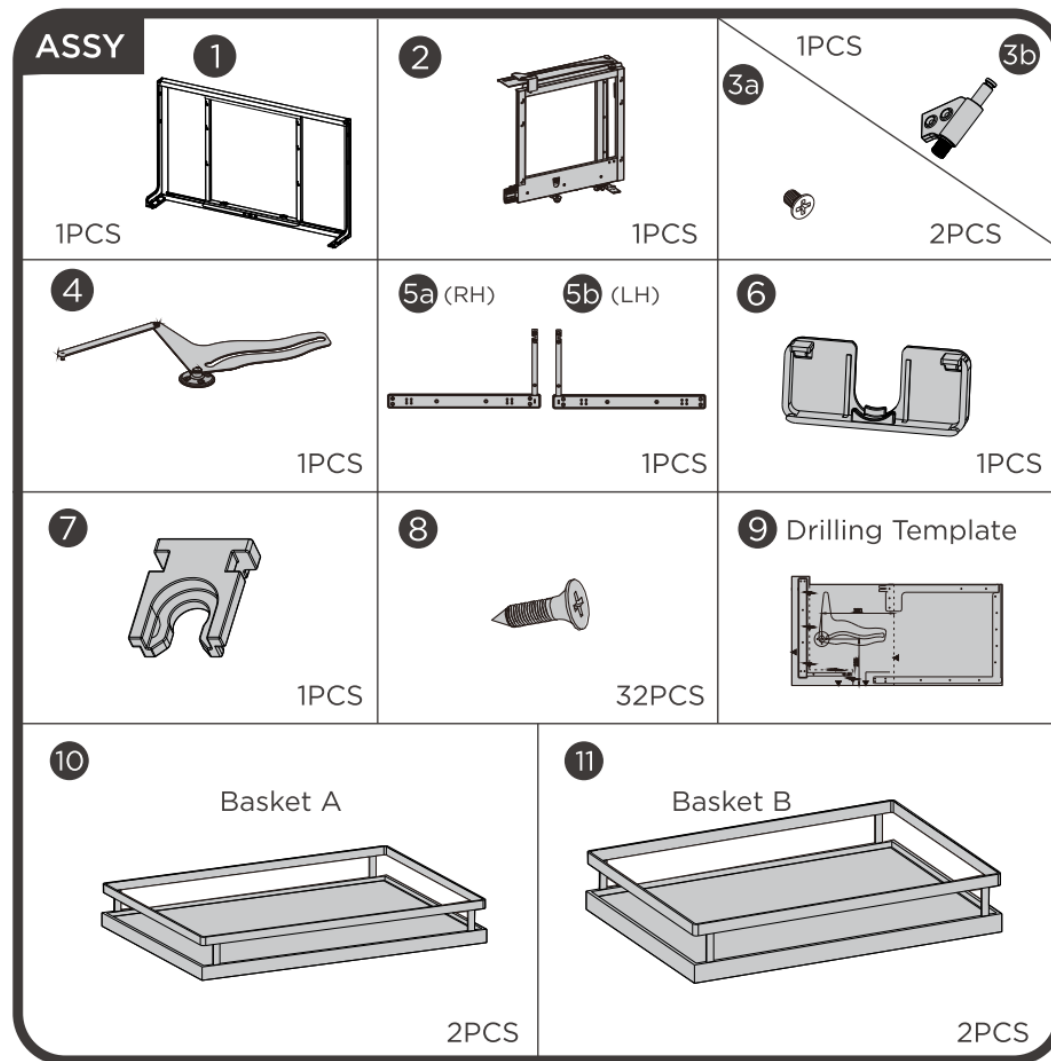


## 2. Drilling Template

Fold and put the installation template in the cabinet and drill holes accordingly  
(Remark: Align to the cabinet edge)

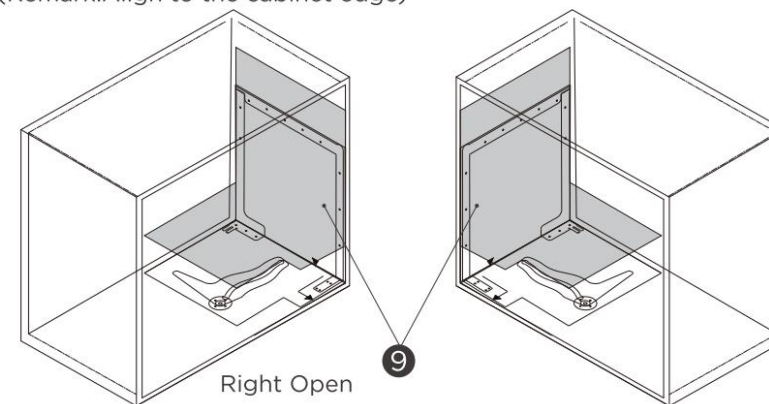


## 3. Inner Frame installation

3.1 Use 8pcs Self-tapping screw ST4.0\*16(N0.8) to fix the frame in the cabinet

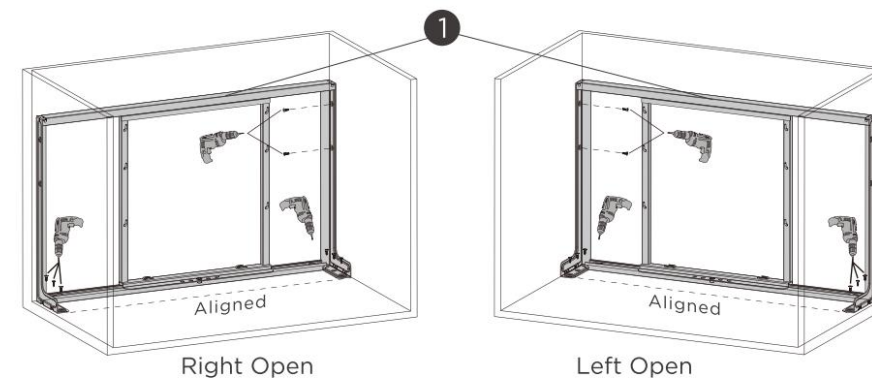


## 4.Side Swivel Frame Installation

4.1


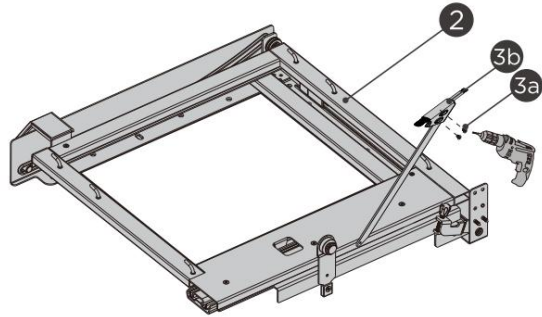


4.2 Fix the side swivel frame to the cabinet with 11 pcs of ST4.0



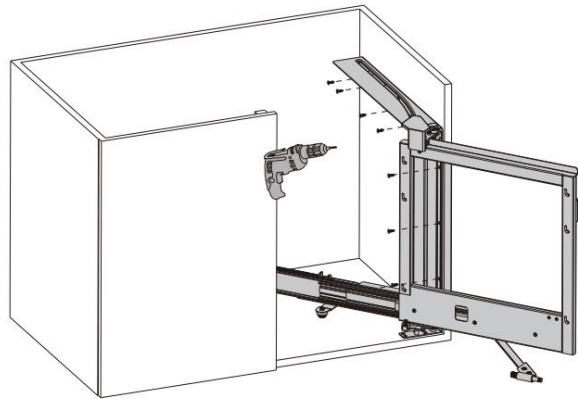


## 5.Spinner Part installation

5.1

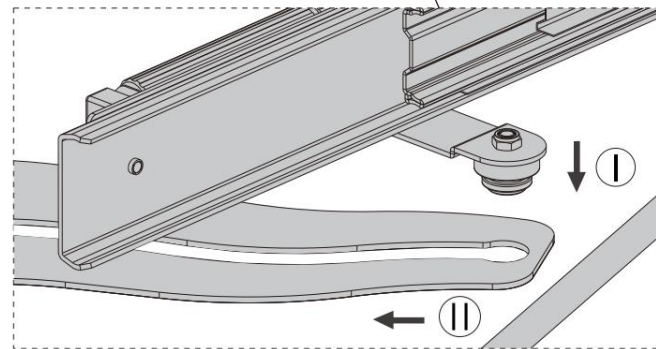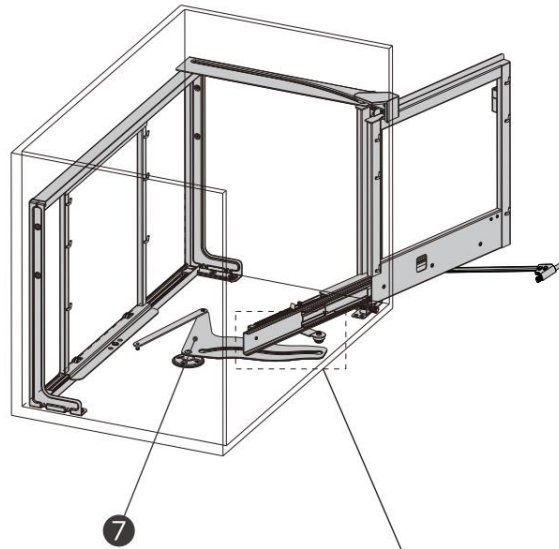


5.2

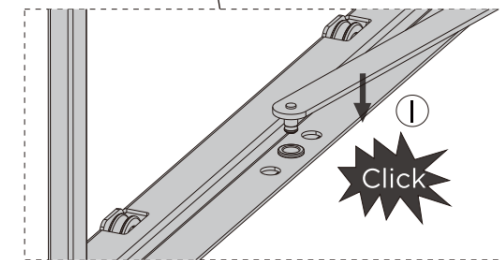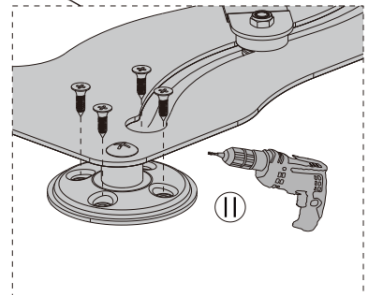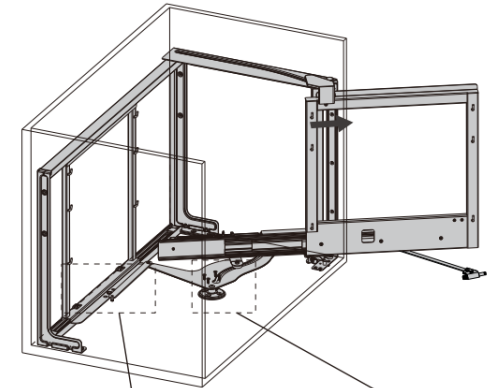


## 6.Cabinet Door Installation



6.1 Drill by following the template as illustrated below

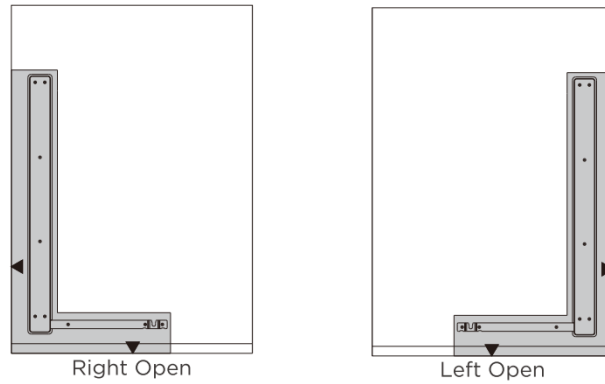


6.2

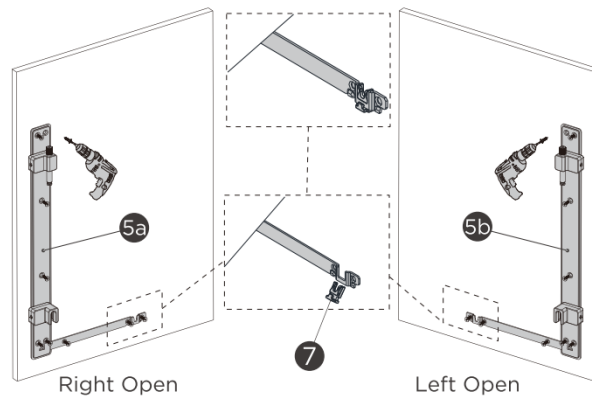

6.3

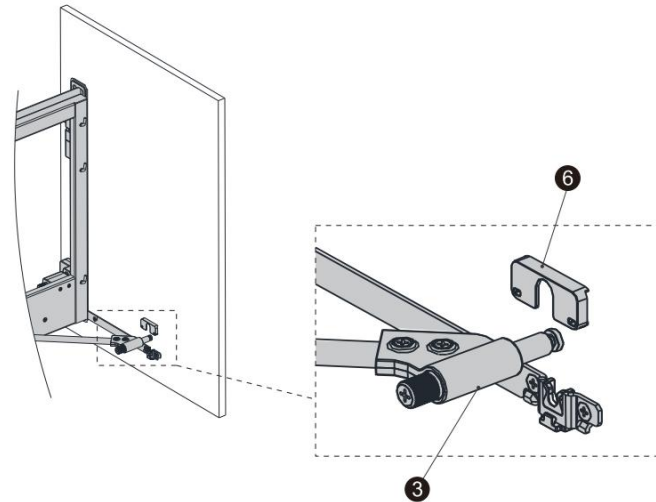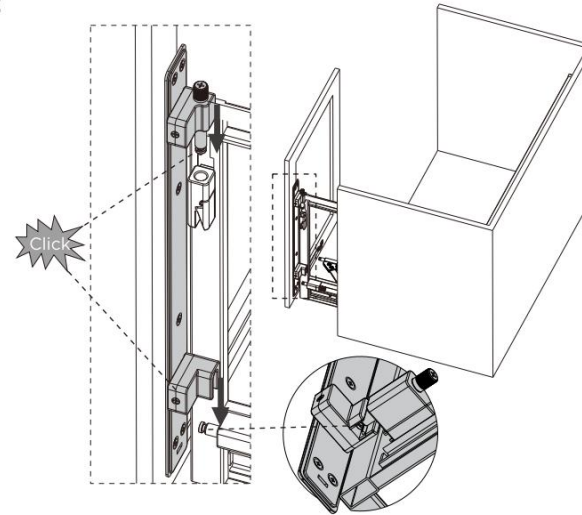

## 7.Adjustment

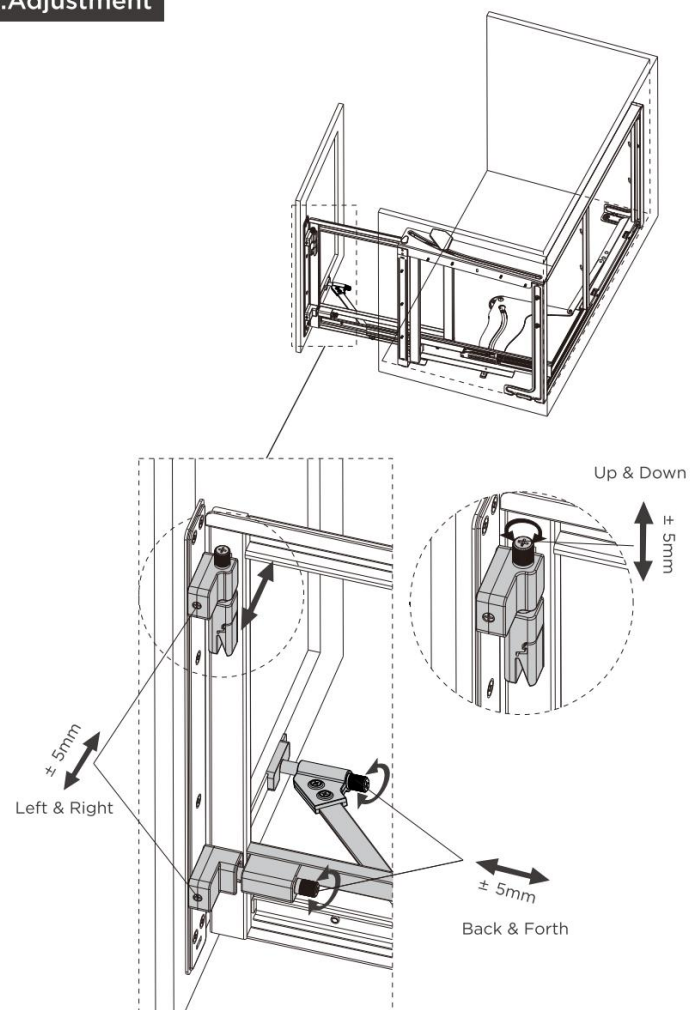

## 8.Hang all baskets

